HOW TO USE:

leuneM notruction Manual



(for All Brushless Motors type) MK-BRP Brushless Bearing Puller

motors such as Team Orion, Speed Passion, Novak and LRP. This tool ensures that the bearing is MuchMore's exclusive Brushless Motor Bearing Puller is for use with all of current popular brushless


Removal of damaged bearing or remount new bearing for: precisely aligned when mounted and helps you remove or remount the bearing.

The sensor circuitry of Speed Passion motor, The motor can of LRP, Novak, Speed Passion and

HOW TO USE:

After fully tightened, remove Tool A and B by turning them in counterclockwise. Make sure the bearing and its retainer to be aligned when you tighten the tools. Place each part as shown to the following pictures then tighten(clockwise) Tool A and B gently.



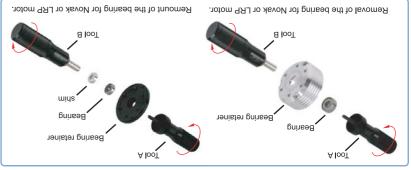

411-842, Korea Goyangcity, Gyeong-gi do, 127-1, Poongdong, Ilsangu, KOREA...www.much-more.co.kr

MK-BRP Brushless Bearing Puller

The sensor circuitry of Speed Passion motor, The motor can of LRP, Novak, Speed Passion and

precisely aligned when mounted and helps you remove or remount the bearing.

Bearing retainer

After fully tightened, remove Tool A and B by turning them in counterclockwise.

Make sure the bearing and its retainer to be aligned when you tighten the tools.

Place each part as shown to the following pictures then tighten(clockwise) Tool A and B gently.



(for All Brushless Motors type)



motors such as Team Orion, Speed Passion, Novak and LRP. This tool ensures that the bearing is



Remount of the bearing for Novak or LRP motor.

B [00]

Bearing

Bearing retainer

the sensor circuitry of Speed Passion motor

8 looT

Bearing retainer

Mounting of new bearing to

moo.seusiomdoum.www......ASU

TEL +82 31 903 0487 FAX +82 31 903 0497 411-842, Korea Goyangcity, Gyeong-gi do, 127-1, Poongdong, Ilsangu,

Bearing retainer

Removal of the bearing for Novak or LRP motor.

the sensor circuitry of Speed Passion motor

Removal of damaged bearing or remount new bearing for:

Removal of damaged bearing from

moo.sauenondoum.www.......ASU ""www.much-more.co.uk di oo alomdonin www....MA9At

TEL +82 31 903 0487 FAX +82 31 903 0497



STATE OF THE ART R/C PRODUCTS

MK-BRP ブラシレスベアリングプーラー(オールブラシレスタイプ用)




この度はマッチモアのマッチモアブラシレスベアリングプーラーのお買い上げ誠にありがとうございます。ブラシレスモーターのベアリング交換時にこのプーラーを使用することで、モーターパーツにダメージを与えること無く正確に組むことが出来ます。

使用可能モーター:

オリオン・スピードパッションタイプモーターのセンサー部及びモーターカン部のベアリング、LRP・Novakなどのブラシレスモーターカン部分に装着されているペアリングの脱着が可能です。

使用方法:

下の図のように各ベアリングツールをセットします。まっすぐベアリングを取れるよう注意しながらツールAとツールB回します。完全に閉めたらツールAとツールBを外してベアリングを抜いて下さい。

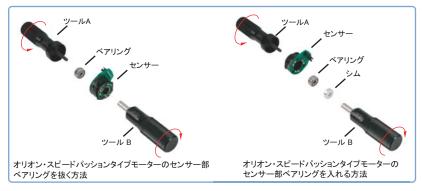





マッチモアレーシング(株) 〒270-0031 千葉県松戸市様須賀2-3-3 TEL: 047-369-7887 FAX: 047-344-2259 http://www.muchmore.co.jp muchmore.jun@qmail.com

MK-BRP ブラシレスベアリングプーラー(オールブラシレスタイプ用)



この度はマッチモアのマッチモアブラシレスベアリングプーラーのお買い上げ誠にありがとうございます。ブラシレスモーターのベアリング交換時にこのプーラーを使用することで、モーターパーツにダメージを与えること無く正確に組むことが出来ます。


使用可能モーター:

説明書

オリオン・スピードパッションタイプモーターのセンサー部及びモーターカン部のベアリング、LRP・Novakなどのブラシレスモーターカン部分に装着されているペアリングの脱着が可能です。

使用方法:

下の図のように各ベアリングツールをセットします。まっすぐベアリングを取れるよう注意しながらツールAとツールB回します。完全に閉めたらツールAとツールBを外してベアリングを抜いて下さい。

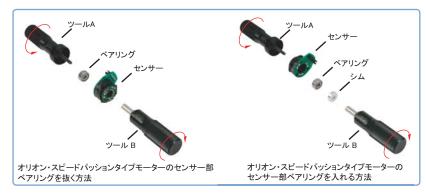





マッチモアレーシング(株)

〒270-0031 千葉県松戸市横須賀2-3-3 TEL: 047-369-7887 FAX: 047-344-2259 http://www.muchmore.co.jp muchmore.jun@gmail.com